


The Aquatic Life Float Valve Kit allows you to fill large tanks, containers, and aquariums automatically. If you are using this with a reverse osmosis or RO/DI system, you **WILL NOT need any other components**, as this includes the necessary auto shut-off valve, check valve and tubing. The adjustable float connects to standard 1/8" MPT.

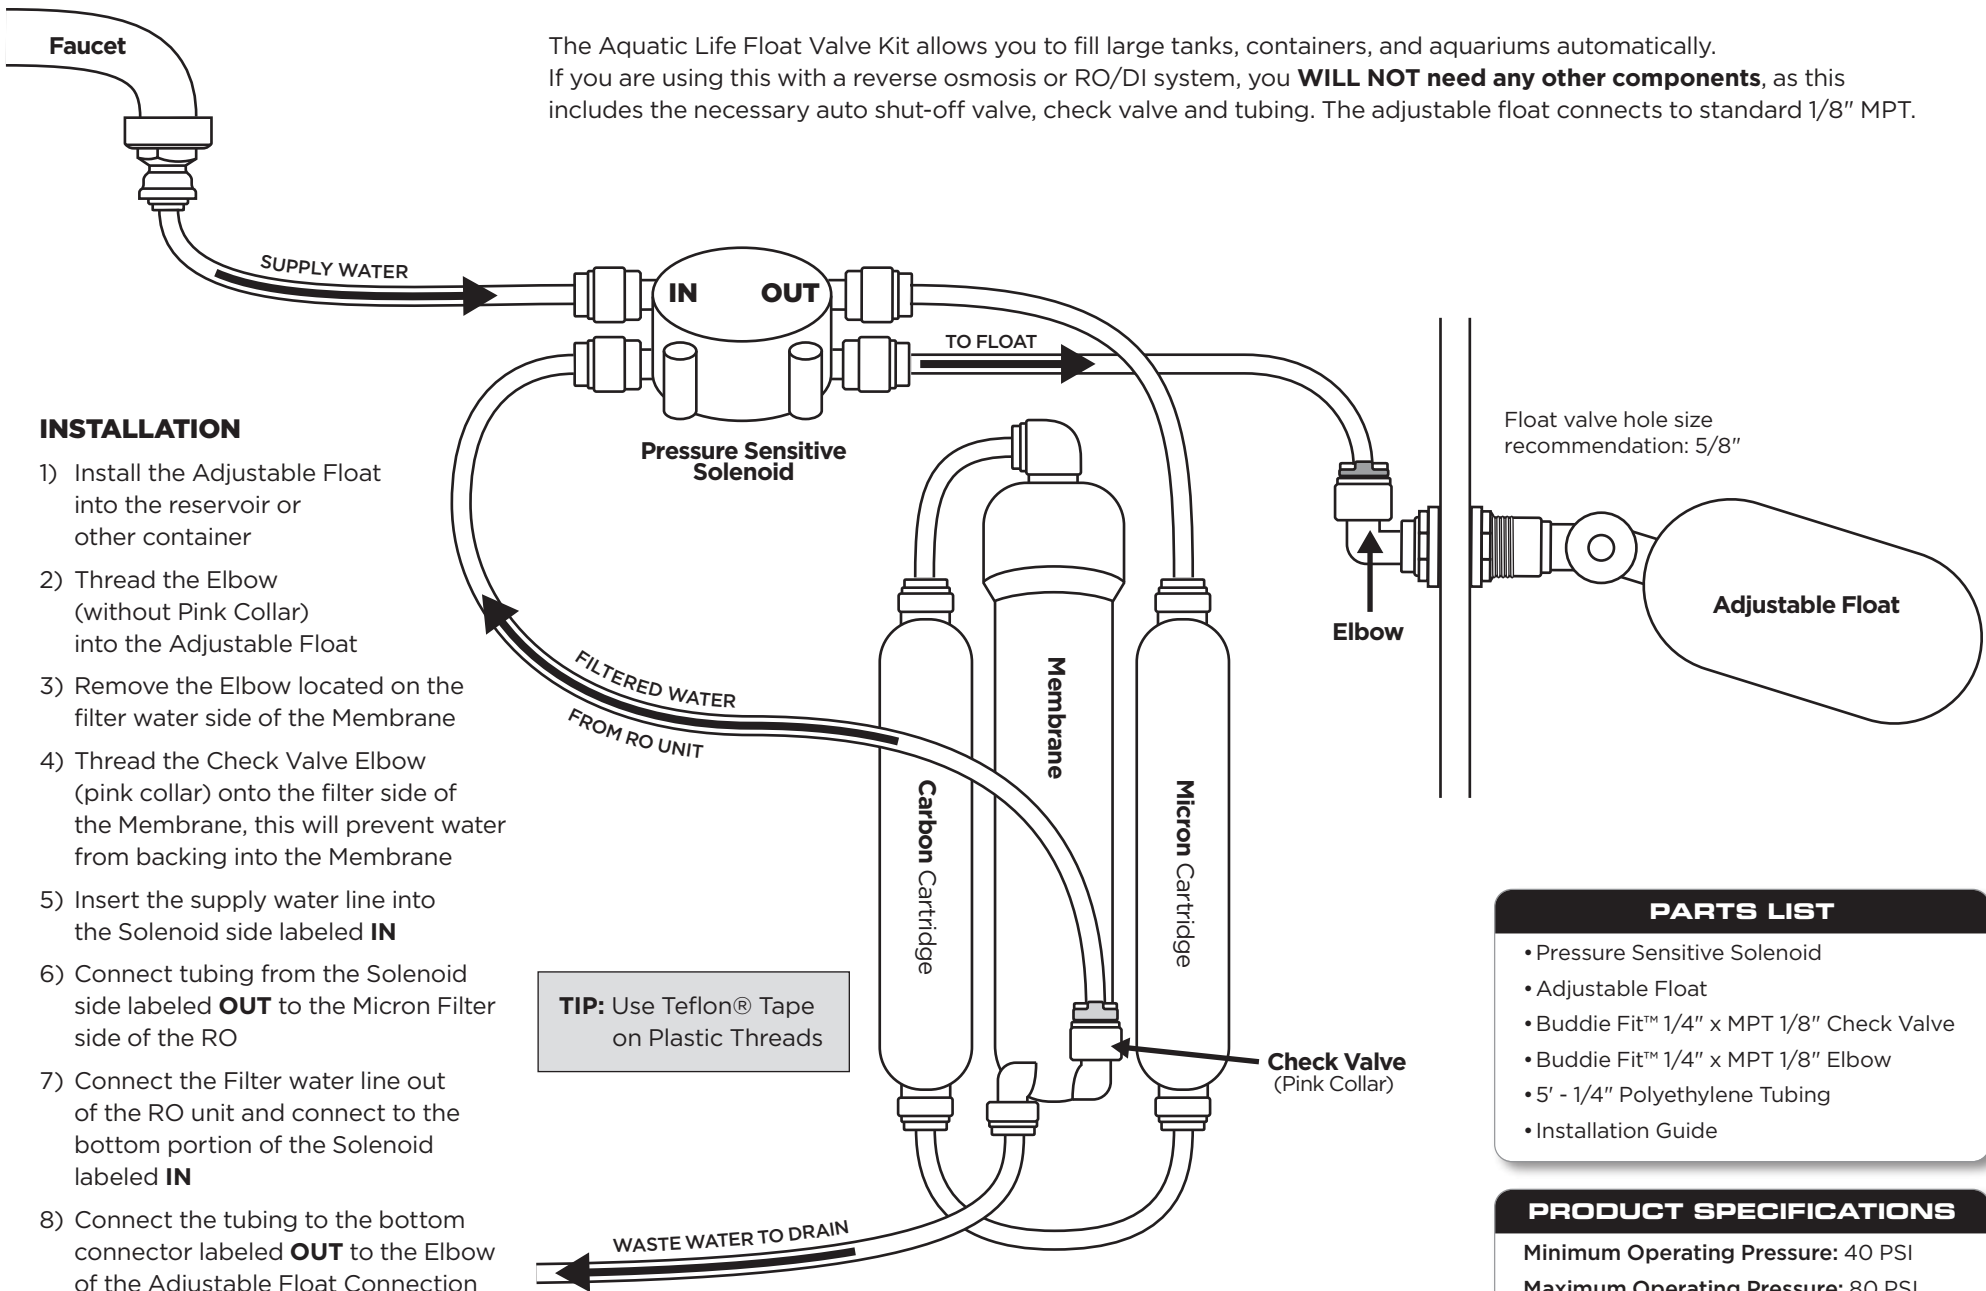

INSTALLATION

- 1) Install the Adjustable Float into the reservoir or other container
- 2) Thread the Elbow (without Pink Collar) into the Adjustable Float
- 3) Remove the Elbow located on the filter water side of the Membrane
- 4) Thread the Check Valve Elbow (pink collar) onto the filter side of the Membrane, this will prevent water from backing into the Membrane
- 5) Insert the supply water line into the Solenoid side labeled **IN**
- 6) Connect tubing from the Solenoid side labeled **OUT** to the Micron Filter side of the RO
- 7) Connect the Filter water line out of the RO unit and connect to the bottom portion of the Solenoid labeled **IN**
- 8) Connect the tubing to the bottom connector labeled **OUT** to the Elbow of the Adjustable Float Connection

TIP: Use Teflon® Tape on Plastic Threads

Float valve hole size recommendation: 5/8"

PARTS LIST	
•	Pressure Sensitive Solenoid
•	Adjustable Float
•	Buddie Fit™ 1/4" x MPT 1/8" Check Valve
•	Buddie Fit™ 1/4" x MPT 1/8" Elbow
•	5' - 1/4" Polyethylene Tubing
•	Installation Guide

PRODUCT SPECIFICATIONS	
Minimum Operating Pressure:	40 PSI
Maximum Operating Pressure:	80 PSI



Float Valve Kit With Automatic Shut-Off

 
Fill large tanks, containers,
and aquariums automatically

Includes automatic shut-off valve

Connects to faucet

Aquatic Life is a trademark
of Aquatic Life LLC
© 2013 Commerce, CA 90040
1-888-548-3480
www.aquaticlife.com
Assembled in USA

ITEM # 500300



8 10957 01300 4